

SM-868CD WIRING HARNESS GUIDE

Power Wires

- Yellow** – Battery - Connects to the battery (+) for constant power. This is for memory
- Red** – Ignition - connects to the ignition switch (accessory) wire. This will turn the radio on/off.
- Black** – Ground - connects to ground wire (car chassis)
- Blue** – Power Antenna - connects to the power antenna wire

Speaker wires

- White** – connects to the (+) of the front left speaker.
- White/black** – connects to the (-) of the front left speaker
- Gray** – connects to the (+) of the right front speaker
- Gray/black** – connects to the (-) of the right front speaker
- Green** – connects to the (+) of the rear left speaker
- Green/black** – connects to the (-) of the rear left speaker
- Purple** – connects to the (+) of the rear right speaker
- Purple/black** – connects to the (-) of the rear right speaker

RCA Cables/Connectors

- Output** – Audio (**Red** – right channel, white – left channel)
- Input** – AUX input (**Red** – right channel, white – left channel)